


LEG ADJUSTMENT

Your Little Buddy is equipped with leg levelers. Both inside legs may be adjusted by turning the rubber foot to the right or clockwise to lower the leg, or counter clockwise to raise the leg.

Raise or lower either or both legs until proper level is maintained.

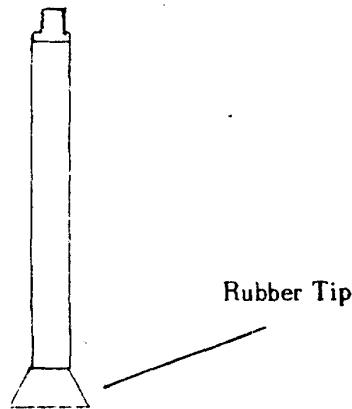

6. To tune the knee lever, the 2nd and 8th strings, press the knee lever to the right and adjust to the lowered pitch using the screws in the end plate. Turning these screws counter-clockwise will allow the string to lower. Release the lever and re-adjust to the open pitch using the tuning pegs. Repeat the entire knee lever procedure if necessary.

DETAILED TUNING PROCEDURE

The pedals raise the pitch of the strings. The knee lever lowers the pitch of the strings.

The strings that do not pull are tuned using the tuning pegs.

1. Tune the 4th string (E) to standard pitch using a pitch pipe.
2. Tune the open tuning of all other strings as indicated by the tuning chart.
3. Tune the A pedal, the one on the left, by holding the pedal down and tuning the raised pitch of the 5th and 10th strings using the tuning pegs. Release the A pedal and retune the open pitch of strings five and ten by turning the stop screws in the right hand end plate of the guitar using the tuning wrench provided.
4. Tune the B pedal, the one in the center using the same procedure as for the A pedal (strings 3 & 6).
5. Tune the C pedal by holding it down and using the same procedure as for A & B pedals.

Tuning Guide

STANDARD LITTLE BUDDY SETUP

3 & 1

E 9th

		A	B	C	RKR
1	F# .013				
2	E ^b .015				- ½ D
3	A ^b .011		+ ½ A		
4	E .014			+ 1 F#	
5	B .017	+ 1 C#		+ 1 C#	
6	A ^b .020		+ ½ A		
7	F# .026w				
8	E .030w				- ½ E ^b
9	D .034w				
10	B .036w	+ 1 C#			

U. S. A. Guitar Company

3069 Fort St. / Lincoln Park, Mich.
(313) 388-1488